


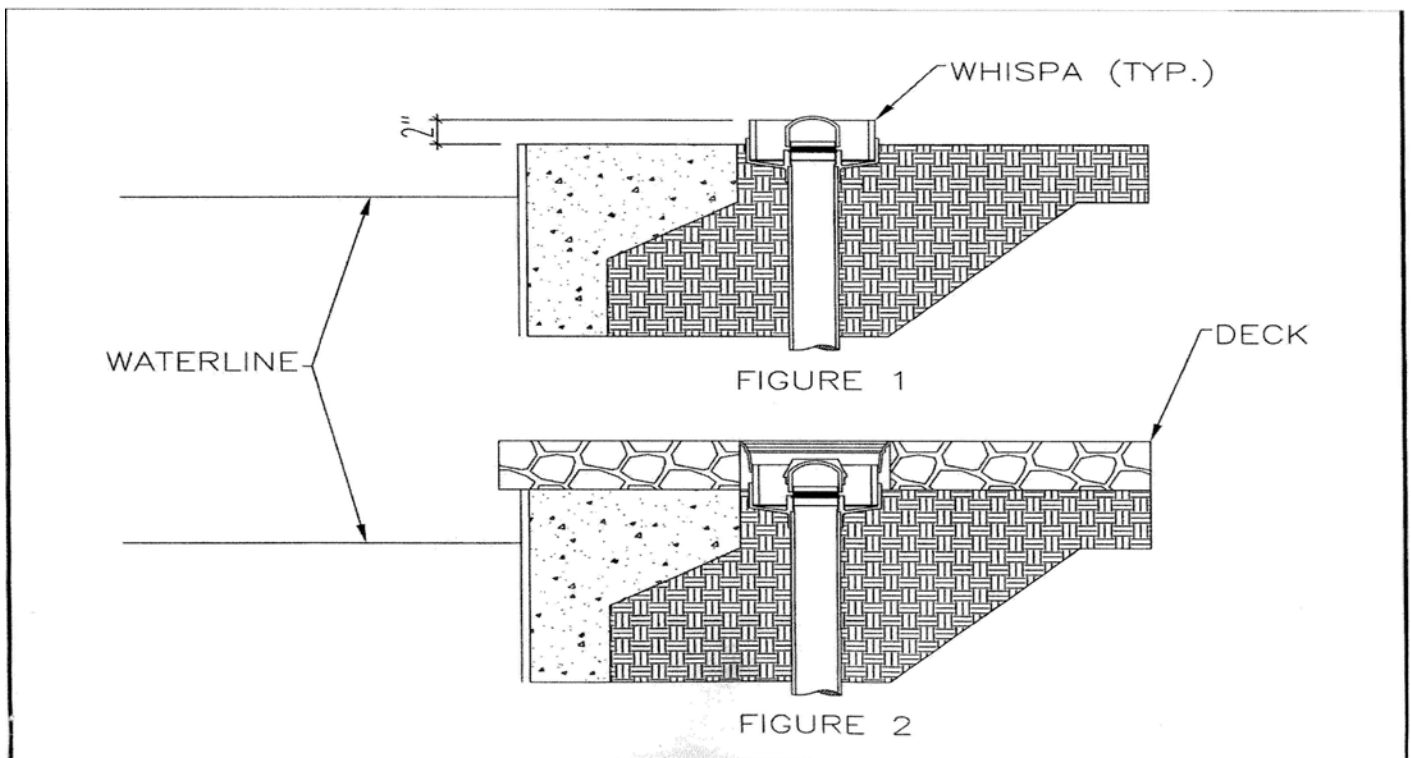

Whispa Installation Instructions

1. Loop therapy air & water lines to insure proper function.
2. Manifold the therapy air lines into one 2" line. Stub up directly behind the bond beam. Do not exceed 4 therapies per unit. See Figure 1
3. Cut stub to Whispa internal housing to finish 2" above top of bond beam. See Figure 1
4. Glue Whispa to pipe. Lid & ring can be adjusted & set by deck personnel.
5. Remove muffler & rubber cap, install 2" threaded plug to allow pressure testing of lines.
6. Finished installation should be as per figure 2.
7. "Shell" rubber cap can be placed over muffler to shut off air & allow heating through therapies.



A&A Manufacturing

www.aamfg.com

3750 West Indian School Road, Phoenix, AZ 85019

Toll Free: 1-800-851-8492, In Arizona: 1-602-256-6935, Fax: 1-602-532-4896